



Samsung Galaxy Alpha microSIM Card Replacement

Samsung Galaxy Alpha microSIM Card Replacement

Written By: Tyler



INTRODUCTION

This guide demonstrates how to remove the microSIM card in order to replace it.

Step 1 — Lift off Back Cover



- Locate slot on back left side of cover.
- Insert thumbnail into slot and lift up.
- Once that edge is released, gently slide thumb around outer edge of back case and release back cover from connections on the back of the phone.

Step 2 — Battery



- ⓘ Make sure the device is powered down before moving forward.
- Locate the slot at the base of the battery and insert your thumb.
- Push slightly toward the battery and out, away from the phone to free the battery.

Step 3 — microSIM Card



- Remove your Micro SIM card from the slot shown.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-21 04:13:00 PM.